

RIVENDALE LODGE RETREAT

Appliance Instructions

One Bedroom

Contents

1. Kitchen Appliances – How to use.....	1
1.1 Oven – Bosch HHF133BSOB	1
1.2 Ceramic Hob – Bosch 4 zone PKE611CA1E	2
1.3 Microwave Bosch BFL523MSOB	3
1.4 Freestanding Fridge Freezer- Bosch KGN34VB35G.....	4
1.5 Caple under counter Wine Cooler- WI157.....	5
1.6 Dishwasher – Bosch Slim line – SPV25CX00GB.....	6
1.7 Auto Washer-Dryer – Bosch WKD28351GB.....	7

N.B Appliances

 
Maintenance and care guide of the fixed appliances can be found in the rear of the home owner's manual where the manufacturer's booklets are kept for each home.

To ensure that you have no future problems with your home it is important that you look after the home carrying out some basic maintenance. Some of these maintenance requirements are mandatory under your 10 Year Warranty. We do recommend that you read the maintenance requirements to provide total peace of min

1. Kitchen Appliances – How to use

1.1 Oven – Bosch HHF133BSOB

Below you can find information on how to use the oven. For more information you may need, please refer to the manufacturer's instruction manual.

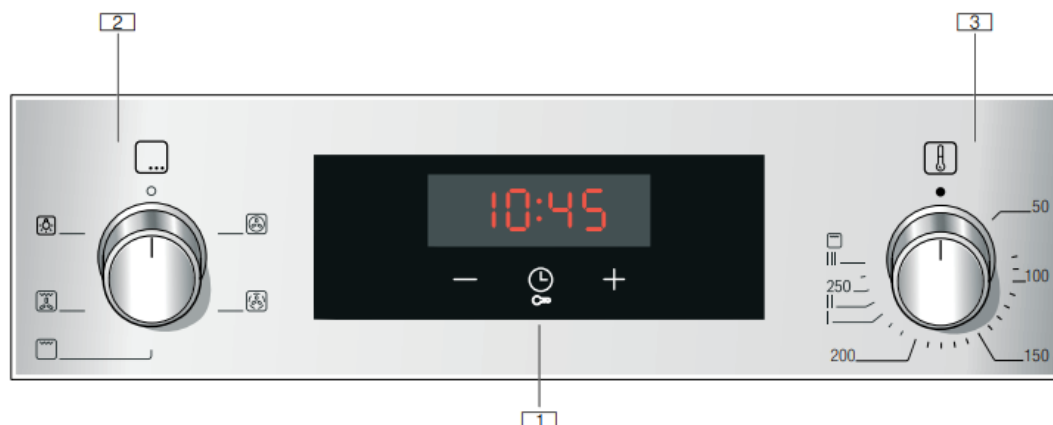

- 1 Buttons and display**
The buttons are touch keys with sensors underneath. Simply touch a symbol to select the function.
The display shows symbols for active functions and the time-setting options.

- 2 Function selector**
Use the function selector to set the heating function or other functions.
You can turn the function selector clockwise or anti-clockwise from the "Off" position.

- 3 Temperature selector**
Use the temperature selector to set the temperature for the heating function or select the setting for other functions.
You can only turn the temperature selector clockwise from the "Off" position, until it offers resistance. Do not turn the selector beyond this point.

Note: On some appliances, the control knobs can be pushed in. To push the control knob in and engage it or to release it again, turn it to the "Off" position.

Buttons and display

You can use the buttons to set various additional functions on your appliance. You will be able to see the values for these on the display.

Symbol	Meaning
	Time-setting options Tap the symbol repeatedly to select the timer , duration , end time and time .
	Childproof lock Lock and unlock the oven functions on the control panel by pressing and holding the button for approx. 4 seconds.
	Minus Reduce setting values.
	Plus Increase setting values.

Buttons

The sensors are located under the individual buttons. They must not be pressed too firmly. Only touch the corresponding symbol.

Display

The value that can be set at the present time or that is elapsing will be shown in large digits on the display.
To use the individual time-setting options, tap the button several times. The symbol that lights up corresponds to the value currently shown in large digits on the display.

Types of heating and functions


Use the function selector to set the types of heating and other functions.

To make sure you always use the right type of heating to cook your food, we have explained the differences and applications below.

Type of heating	Use
	3D hot air For baking and roasting on one or more levels. The fan distributes the heat from the ring heating element in the back panel evenly around the cooking compartment.
	Gentle hot air For gently cooking selected types of food on one level without preheating. The fan distributes the heat from the ring-shaped heating element in the back panel around the cooking compartment. This heating function is used to measure both the energy consumption in air recirculation mode and the energy efficiency class.
	Grill, large area For grilling flat items, such as steaks or sausages, for making toast, and for browning food. The whole area below the grill element becomes hot.
	Circulated air grilling For roasting poultry, whole fish and larger pieces of meat. The grill element and the fan switch on and off alternately. The fan circulates the hot air around the food.

1.2 Ceramic Hob – Bosch 4 zone PKE611CA1E

 Below you can find information on how to use the hob. For more information you may need, please refer to the manufacturer's instruction manual.

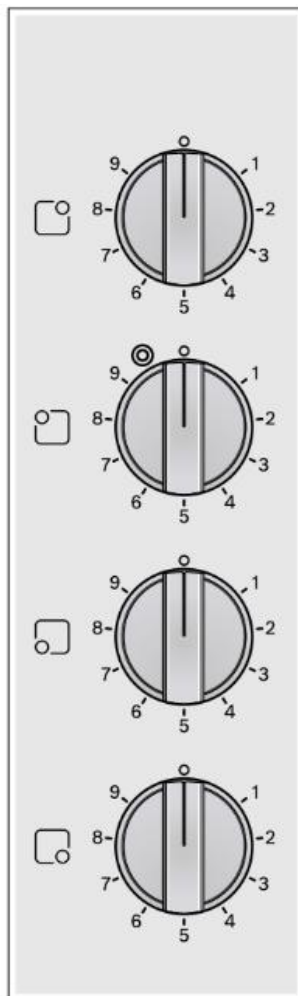

Notes

- Any dark areas in the glow pattern of the hotplate are due to technical reasons. The function of the hotplate is not affected.
- Hotplate temperature is regulated by the heat switching on and off. The heat may also switch on and off at the highest setting. This ensures e.g.:
 - sensitive components are protected from overheating
 - the appliance is protected from electrical overload
 - better cooking results are achieved
- With multi-circuit hotplates the heater elements of the inner filament circuits and the heater element of the activations may switch on and off at different times.

Hotplate and residual heat indicators

The hotplate and residual heat indicators light up when a hotplate is warm:

- Hotplate indicator - during operation, shortly after you have switched on a hotplate.
- Residual heat indicator - after cooking, when the hotplate is still warm.

You can use the residual heat to save energy, e.g. to keep a small dish warm or to melt chocolate.

Hotplate controls

The hotplate controls are permanently fixed. They must not be removed. Forcibly removing the hotplate controls leads to them being destroyed.

The hotplates

Hotplate	Activating and deactivating
○ Single-circuit hotplate	
⊙ Dual-circuit hotplate	Activation: turn hotplate switch to the right as far as ⊙. Setting the heat setting. Switching off: Turn the hotplate switch to 0 and reset. Never turn the hotplate switch past the symbol ⊙ to 0.

Due to the nature of the hob, please be advised that only ferromagnetic cookware can be used such as:

- Cookware made from enamelled steel
- Cookware made from cast iron
- Special induction-compatible cookware made from stainless steel.

 
1.3 Microwave Bosch BFL523MSOB

Below you can find information on how to use the Microwave. For more information you may need, please refer to the manufacturer's instruction manual.

Control panel

You can set your appliance's various functions on the control panel. The current settings are shown on the display.

The overview shows the control panel when the appliance is switched on with a clock time that has been set.

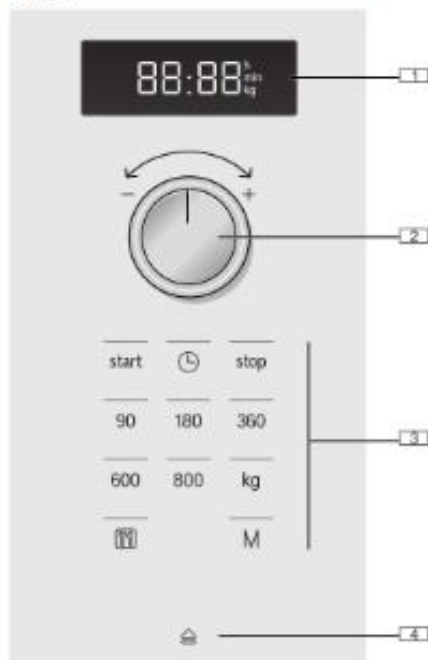

- 1 Display**
For clock and cooking times
- 2 Rotary selector**
For setting the clock and cooking times or for setting automatic programmes
- 3 Buttons**
- 4 Automatic door opening button**

Controls

You will find a brief explanation of the various buttons below. These buttons allow you to set your appliance simply and directly.

Buttons and their meaning

You will find a brief explanation of the various buttons below.

Buttons	Meaning
Symbol	
start	Start the appliance
	Setting the time
stop	Stop or pause the appliance
90	Select a microwave power output of 90 watts
180	Select a microwave power output of 180 watts
360	Select a microwave power output of 360 watts
600	Select a microwave power output of 600 watts
800	Select a microwave power output of 800 watts
kg	Select a weight for the programmes
	Select automatic programmes
M	Select the memory
	Open appliance door

Rotary selector

The rotary selector is used to alter the default values and set values.

The rotary selector is retractable. Press on the rotary selector to lock it in or out.

Automatic door opening

The appliance door springs open if you activate the automatic door opening. You can fully open the appliance door manually.

The automatic door opening does not work in the event of a power cut. You can open the door manually.

Notes

- If you open the appliance door during operation, the operation is paused.
- When you close the appliance door, the operation does not continue automatically. You must restart the operation manually.
- If the appliance has been switched off for a long time, the appliance door will open after a time delay.

Cooling fan

The appliance is equipped with a cooling fan. The fan may run on even if the oven has been switched off.

Notes

- The cooking compartment remains cold during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

1.4 Freestanding Fridge Freezer- Bosch KGN34VB35G

Below you can find information on how to use the fridge-freezer. For more information you may need, please refer to the manufacturer's instruction manual.

Controls

Fig. 2

- 1 **Display alarm**
This lights up if the appliance becomes too warm.
- 2 **Refrigerator compartment temperature selection button**
The button sets the temperature in the refrigerator compartment.
- 3 **"super" display**
Illuminates, if the super cooling is in operation.
- 4 **Temperature display refrigerator compartment**
The numbers correspond to the set refrigerator compartment temperatures in °C.
- 5 **Eco indicator**
This lights up when eco mode is switched on in the cooling compartment.
- 6 **Temperature selection button freezer compartment**
The button sets the temperature in the freezer compartment.
- 7 **"super" display (freezer compartment)**
Illuminates when super freezing is on.
- 8 **Temperature display freezer compartment**
The numbers correspond to the set freezer compartment temperatures in °C.
- 9 **Eco indicator**
This lights up when eco mode is switched on in the freezer compartment.

Switching on the appliance

Fig. 2

1. Insert the plug in the socket.
2. A warning signal sounds. The temperature display 8 flashes.
3. Press the temperature setting button 2. The warning signal switches off.

When the freezer compartment has reached the set temperature, the temperature display 8 is lit.

The factory recommends the following settings:

- Refrigerator compartment: medium setting
 - Freezer compartment: -18°C
- Store delicate foods in the refrigerator compartment.

Operating tips

- When the appliance has been switched on, it may take several hours until the set temperatures have been reached.
- The fully automatic NoFrost system ensures that the freezer compartment remains free of ice. Defrosting is no longer required.
- The sides of the housing are sometimes heated slightly. This prevents condensation in the area of the door seal.
- If the freezer compartment door cannot be immediately re-opened after it has been closed, wait until the resulting low pressure has equalised.

Setting the temperature

Refrigerator compartment

The temperature can be set from +2 °C to +8 °C.

Keep pressing the temperature election button 2 until the required refrigerator compartment temperature is set.

The value last selected is saved. The set temperature is indicated on temperature display 4.

Note

To reach the selected temperature, open the ventilation openings to 1/3, Fig. 6.

Freezer

The temperature can be set from -16 °C to -24 °C.

Keep pressing temperature setting button 6 until the required freezer compartment temperature is set.

The value last selected is saved. The set temperature is indicated on temperature display 8.

We recommend a factory setting of -18 °C in the freezer compartment.

1.5 Caple under counter Wine Cooler- WI157

Below you can find information on how to use the Wine Cooler. For more information you may need, please refer to the manufacturer's instruction manual.

CONTROL PANEL



Buttons

Light - Used to switch the internal light on/off

Power - To switch the appliance on/off
(press and hold this button for approximately 3 seconds)

Up - Used to raise the temperature in 1°C increments

 
Down - Used to lower the temperature in 1°C increments

TEMPERATURE ALARM

If inner temperature is higher than 23°C, "HI" is shown in the display panel, and the alarm sounds after one hour continuously. It warns you that the inner temperature is too high.

If inner temperature is lower than 0°C, "LO" is shown in the display panel, the alarm sounds and the malfunction indicator lights at the same time.


WINE BOTTLE STACKING

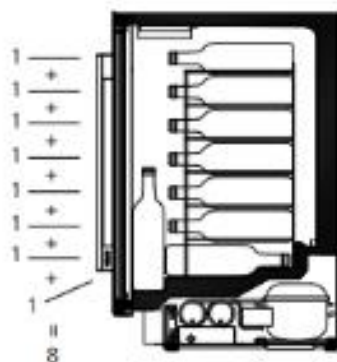

Stores max. 8 Bordeaux style bottles 750ml.


1.6 Dishwasher – Bosch Slim line – SPV25CX00GB

 Below you can find information on how to use the dishwasher. For more information you may need, please refer to the manufacturer's instruction manual.

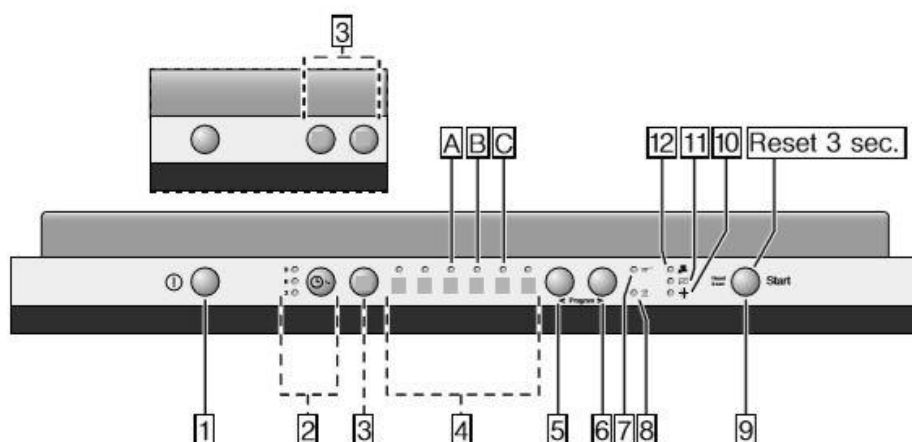

Control panel

 - 1 ON/OFF switch
 - 2 Timer programming *
 - 3 Additional options **
 - 4 Programme **
 - 5 Button <
 - 6 Button >
 - 7 Cleaning display
 - 8 Dry display
 - 9 START button
 - 10 Rinse aid refill indicator
 - 11 Salt refill indicator
 - 12 Display "Check water supply"
- * depending on model
** Number depending on model

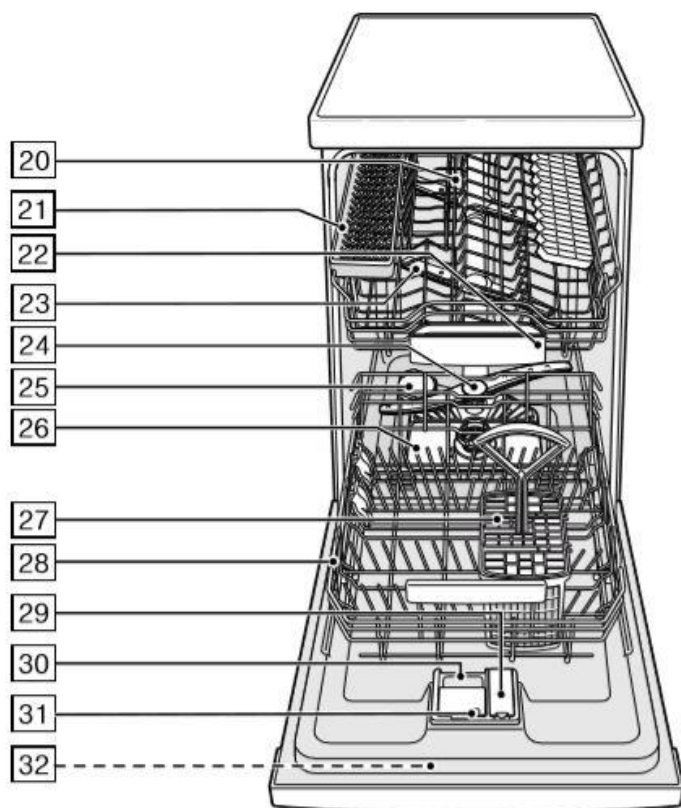

Appliance interior

- 20 Top basket
 - 21 Knife shelf *
 - 22 Tablet collecting tray
 - 23 Upper spray arms
 - 24 Bottom spray arm
 - 25 Dispenser for special salt
 - 26 Filters
 - 27 Cutlery basket
 - 28 Bottom basket
 - 29 Dispenser for rinse aid
 - 30 Detergent dispenser
 - 31 Lock for detergent dispenser
 - 32 Rating plate
- * depending on model

1.7 Auto Washer-Dryer – Bosch WKD28351GB

Below you can find information on how to use the washer-dryer. For more information you may need, please refer to the manufacturer's instruction manual.

