

# RIVENDALE LODGE RETREAT

Appliance Instructions

The Pod



## Contents

1. Kitchen Appliances – How to use.....	1
1.1 Compact Oven with Microwave function– Bosch CMG633BS1B .....	1
1.2 Ceramic 2 Burner Hob – Bosch PKF375P1E .....	2
1.3 Freestanding Under Counter Fridge- LEC R5511W/S/B.....	3
1.4 Dishwasher – Bosch Slim line – SPV25CX00G .....	4
1.5 Auto Washer-Dryer – Bosch WKD28351GB.....	5

### **N.B Appliances**


Maintenance and care guide of the fixed appliances can be found in the rear of the home owner's manual where the manufacturer's booklets are kept for each home.

To ensure that you have no future problems with your home it is important that you look after the home carrying out some basic maintenance. Some of these maintenance requirements are mandatory under your 10 Year Warranty. We do recommend that you read the maintenance requirements to provide total peace of mind.

# 1. Kitchen Appliances – How to use

## 1.1 Compact Oven with Microwave function– Bosch CMG633BS1B

Below you can find information on how to use the oven. For more information you may need, please refer to the manufacturer's instruction manual.

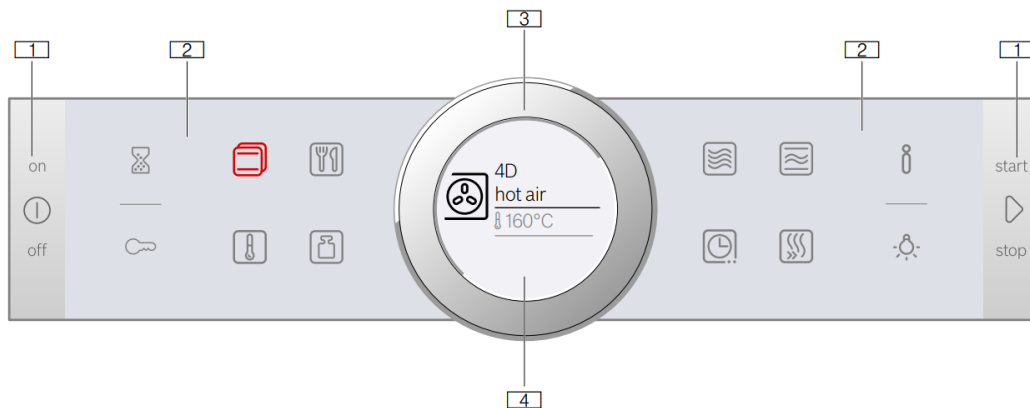

### 1 Buttons

The buttons on the left- and right-hand side of the control panel have a pressure point. Press these buttons to activate them. For appliances that do not have a stainless steel front, these two button touch fields do not have a pressure point.

### 2 Touch fields

There are sensors under the touch fields. Simply touch the respective symbol to select the function.

### 3 Rotary selector

The rotary selector is fitted so that you can turn it indefinitely to the left or right. Press it lightly and move it in the direction required using your finger.

### 4 Display

You can see the current adjustment values, options or notes in the display.

## Controls

The individual controls are adapted for the various functions of your appliance. You can set your appliance simply and directly.

### Buttons and touch fields

Here you can find a short explanation of the various buttons and touch fields.

Symbol	Meaning
<b>Buttons</b>	
⏻	on/off
▶	Start/Stop

### External touch fields

⌚	Timer	Selects the timer
🔒	Childproof lock	Activating and deactivating (hold down for approx. 4 secs) the childproof lock
i	Information	Display notes Hold down (approx. 3 secs) to call up the basic settings
💡	Interior lighting	Switches the interior lighting on and off

### Internal touch fields


🍳	Heating types	Selects the "heating types" operating mode
🌡️	Temperature	Selects the temperature in the cooking compartment
🍲	AutoCook	Selects the operating mode for dishes with cooking programmes
📏	Weight	Selects the weight for the operating mode for dishes
📶	Microwave	Selecting the Microwave operating mode
🕒	Time-setting options	Select time-setting options
📶	MicroCombi	Selecting the MicroCombi operating mode
🔥	Rapid heating	Starts or cancels Rapid heating for the cooking compartment

The touch field, which has a value on the display that can be changed or displayed in the foreground, lights up red.

## 1.2 Ceramic 2 Burner Hob – Bosch PKF375P1E

Below you can find information on how to use the hob. For more information you may need, please refer to the manufacturer's instruction manual.

### The control panel

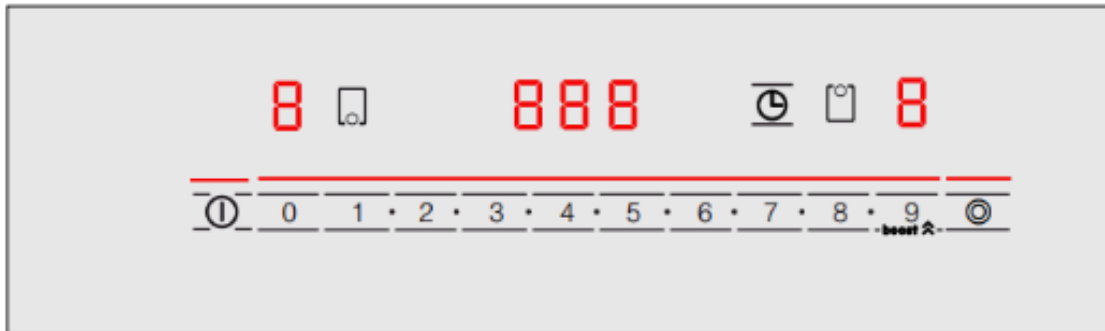

Displays	
<i>1-9</i>	Heat settings
<i>H/h</i>	Residual heat
<i>b</i>	PowerBoost function
<i>88</i>	Timer

Controls	
ⓘ	Main switch
□	Hotplate selection
1•2•3•4•	Settings range
⊙	Activating the dual-circuit hotplate
🕒	Time-setting options / Childproof lock
boost ⬆	PowerBoost function

#### Notes

- When you touch a symbol, the respective function is activated.
- Always keep the controls dry. Moisture reduces their effectiveness.
- Do not pull pans close to the displays and sensors. The electronics could overheat.

### The hotplates

Burner	Activating and deactivating	
○	Single-circuit hotplate	
⊙	Dual-circuit hotplate	Select the hotplate and touch the ⊙ symbol

When the hotplate is activated: the corresponding indicator lights up

#### Notes

- Any dark areas in the glow pattern of the hotplate are due to technical reasons. The function of the hotplate is not affected.
- Hotplate temperature is regulated by the heat switching on and off. The heat may also switch on and off at the highest setting. This ensures e.g.:
  - sensitive components are protected from overheating
  - the appliance is protected from electrical overload
  - better cooking results are achieved
- With multi-circuit hotplates the heater elements of the inner filament circuits and the heater element of the activations may switch on and off at different times.

### Residual heat indicator

The hob has a two-stage residual heat indicator for each hotplate.

If *H* appears in the display the hob is still hot. It may be used, for example, to keep a small meal warm or to melt cooking chocolate. As the hotplate cools down further, the display changes to *h*. The display remains lit until the hotplate has cooled sufficiently.

Due to the nature of the hob, please be advised that only ferromagnetic cookware can be used such as:

- Cookware made from enamelled steel
- Cookware made from cast iron
- Special induction-compatible cookware made from stainless steel.

To check whether your cookware is suitable for induction cooking, please refer to the section on "Cookware check" in the manufacturer's instruction manual.

### 1.3 Freestanding Under Counter Fridge- LEC R5511W/S/B

Below you can find information on how to use the fridge. For more information you may need, please refer to the manufacturer's instruction manual.

## Using Your Appliance

---

### Tips for using this appliance

- Before storing cooked foods in the refrigerator, allow them to cool to room temperature.
- To maintain adequate air circulation, do not over fill the appliance. If there is too much food inside, the compressor does not work as effectively.
- Do not open the door any more than necessary - this will keep the temperature as cold as possible inside.
- When storing frozen food in the freezer, make sure that you follow the food manufacturers guidelines.
- Ices and water ices should not be consumed straight from the freezer - this can cause ice burns to the tongue and hands.
- Never touch the inside of the appliance, or any frozen items with wet hands. This can cause injury to your hands if they stick to cold surfaces.
- Wrap or cover foods well before storing. Always make sure that any packaging is air tight and suitable for use inside a fridge or freezer.
- Cooked meats and raw meats should be stored on separate shelves, and raw meat should not be allowed to drip onto other foods. Food which is to be frozen should not be in direct contact with already frozen food.
- You may hear gurgling noises or a humming sound while the appliance is in use and this is perfectly normal when the compressor is running and the coolant is moving through the system.
- A clicking sound may be heard, this is the thermostat and is normal.
- This appliance is designed to operate in an ambient temperature between 16 and 38 °C.
- Effervescent (fizzy) drinks should not be stored in the freezer or low temperature compartments.
- Do not exceed the storage times recommended by the food manufacturer and always check expiry dates.
- Smaller portions of fresh food freeze quicker than large portions. Divide large portions into smaller ones. This helps to preserve the nutrients and quality of the food.
- Always allow warm food to cool down before freezing it, preferably to room temperature.
- Before you store large amounts of food in the freezer, adjust the thermostat to the maximum (coldest) setting while the appliance freezes the food. After 24 hours, re-set the thermostat to the previous setting.
- Only thaw the amount of food you need, once food has been thawed cook it immediately.
- Do not wash shelf retention in hot water.

## Care & Cleaning

---

### Before cleaning your appliance

You should always unplug this appliance before cleaning.

### To clean your appliance

- Once defrosted, remove the accessories inside and clean the using warm water and a neutral detergent. Do not place them in a dishwasher.
- Clean the inside of the cabinet with warm water and a neutral detergent, do not use harsh abrasives or caustic cleaners.
- Dry the inside of the cabinet with a soft, dry cloth. Always make sure the inside of the appliance is dry after cleaning.
- Avoid getting water into the electric components of the appliance (i.e. the thermostat), or spilling water on the fridge.
- When cleaning the door seals, use only warm soapy water. Please use a mild soap and avoid damaging the door seal as this will affect the performance of your appliance.
- Clean the outside of the appliance with warm, soapy water and dry with a soft cloth. Any accumulation of dirt and dust should be removed from the back and bottom of the appliance to maintain adequate ventilation.
- If the appliance is not in use for a long period of time, you should defrost and clean the appliance as detailed. Make sure that it is dry, then unplug and leave the door open to prevent unpleasant smells inside.
- Clean the drainage channel regularly to prevent any build up of impurities. Use a damp clean cloth and wipe the channel clean, then use a pipe cleaner or similar flexible object to clean the drainage hole to prevent blockages.
- Unhook and clean the drip tray occasionally.

**Please note:** Regular turning off may shorten the life of this appliance.

## 1.4 Dishwasher – Bosch Slim line – SPV25CX00G

Below you can find information on how to use the dishwasher. For more information you may need, please refer to the manufacturer's instruction manual.



### Operating the appliance

#### Programme data

The programme data (consumption values) can be found in the summary of instructions. This data refers to normal conditions and the water hardness set value 2. Different influencing factors such as water temperature or mains pressure may result in deviations.

#### Aqua sensor \*

\* depending on model

The Aqua sensor is an optical measuring device (light barrier) which measures the turbidity of the rinsing water.

The Aqua sensor is used according to the programme. If the Aqua sensor is active, "clean" rinsing water can be transferred to the next rinse bath and water consumption can be reduced by 3–6 litres. If the turbidity is greater, the water is drained and is replaced with fresh water. In the automatic programmes the temperature and running time can also be adjusted to the degree of soiling.

#### Optical display while the programme is running \*

\* depending on model

While the programme is running, a light spot shines on the floor under the appliance door. Do not open the dishwasher door until the light point is no longer visible on the floor.

If the appliance is installed at eye-level, with flush furniture front, the light point is not visible.

#### Timer programming \*

\* depending on model

You can delay the start of the programme by 3, 6 or 9 hours.

1. Switch on ON/OFF switch .
2. Keep pressing the Preselected starting time button  until the appropriate display 3h, 6h or 9h is lit.
3. Press START button , timer programming is activated.
4. To delete the preselected starting time, keep pressing the Preselected starting time button  until none of the displays 3h, 6h or 9h is lit. You can change your programme selection at any time until the programme starts.

### Switching on the appliance

1. Turn on the tap fully.
2. Open the door.
3. Switch on ON/OFF switch .  
The Eco 50° programme display flashes. This programme remains selected unless another programme is selected with the button <  or button > .
4. Press the START button .
5. Close the door.  
The programme starts running.

#### Note

##### - for environmentally friendly operation of the dishwasher:

For ecological reasons the Eco 50° programme is preset whenever the appliance starts. This conserves environmental resources and not least saves you money.

**The Eco 50° programme is a particularly environmentally friendly programme. According to EU regulation 1016/2010 it is the "Standard programme" which is the most efficient standard cleaning cycle for cleaning normally soiled utensils in terms of the combined energy and water consumption for cleaning these types of utensils.**

### End of programme

The programme has ended when neither of the two displays  or  is lit.

The end of the programme is also indicated by an acoustic signal. The buzzer volume can be set in 4 stages. Accordingly 0, 1, 2 or 3 displays are lit (see water hardness table). Factory setting: 2. This function can be changed as follows:

1. Open the door.
2. Switch on ON/OFF switch .
3. Hold down button >  and press START button  until the dry display  and salt refill indicator  flash.
4. Release buttons.
5. Keep pressing button >  until the salt refill indicator  and rinse aid refill indicator  flash.
6. Release buttons.  
The refill indicators  and  flash and the displays  and  are lit (= Setting 2). The set buzzer volume can be heard.

#### To change the setting:

1. Press the button <  until the required setting has been selected.
2. Press START button .  
The displays go out. The selected setting is saved.
3. Close the door.

#### Note

To save energy, the dishwasher automatically switches off after the end of the programme.

## 1.5 Auto Washer-Dryer – Bosch WKD28351GB

Below you can find information on how to use the washer-dryer. For more information you may need, please refer to the manufacturer's instruction manual.

