

# STRATFORD LODGE RETREAT

Appliance Instructions  
Two Bedroom Centre Lounge



 
## Contents

1.	Kitchen Appliances – How to use.....	
1.1	Oven – Bosch HHF133BSOB .....	1
1.2	Ceramic Hob – Bosch 4 zone PKN811D17E.....	2
1.3	Microwave Bosch BFL523MSOB .....	3
1.4	Freestanding Fridge Freezer- Bosch KGN33NL3AG .....	4
1.5	Dishwasher – Bosch Slim line – SMV40C00GB.....	5
1.6	Auto Washer-Dryer – Bosch WKD28352GB.....	6

# 1. Kitchen Appliances – How to use

## 1.1 Oven – Bosch HHF133BSOB

Below you can find information on how to use the oven. For more information you may need, please refer to the manufacturer's instruction manual.

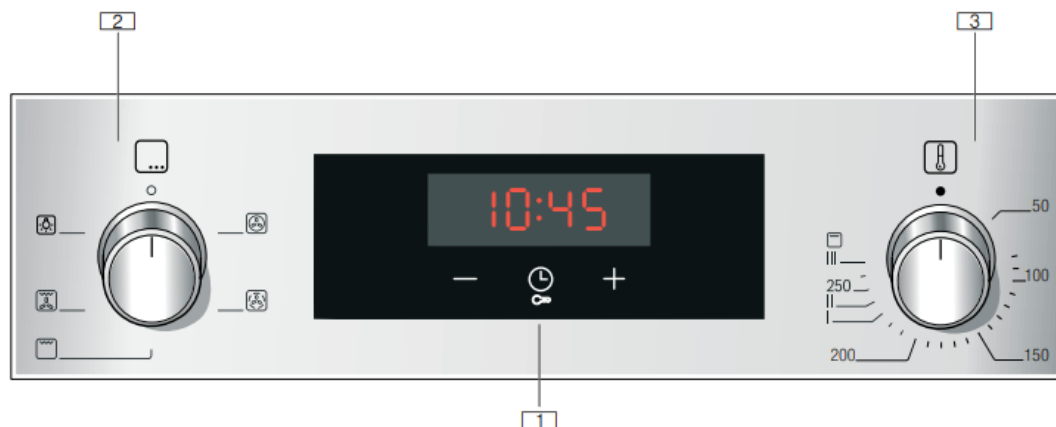

- 1 Buttons and display**  
The buttons are touch keys with sensors underneath. Simply touch a symbol to select the function.  
The display shows symbols for active functions and the time-setting options.

- 2 Function selector**  
Use the function selector to set the heating function or other functions.  
You can turn the function selector clockwise or anti-clockwise from the "Off" position.

- 3 Temperature selector**  
Use the temperature selector to set the temperature for the heating function or select the setting for other functions.  
You can only turn the temperature selector clockwise from the "Off" position, until it offers resistance. Do not turn the selector beyond this point.

**Note:** On some appliances, the control knobs can be pushed in. To push the control knob in and engage it or to release it again, turn it to the "Off" position.

### Buttons and display

You can use the buttons to set various additional functions on your appliance. You will be able to see the values for these on the display.

Symbol	Meaning
	Time-setting options Tap the symbol repeatedly to select the timer  , duration  , end time  and time .
	Childproof lock Lock and unlock the oven functions on the control panel by pressing and holding the button for approx. 4 seconds.
	Minus Reduce setting values.
	Plus Increase setting values.

### Buttons

The sensors are located under the individual buttons. They must not be pressed too firmly. Only touch the corresponding symbol.

### Display

The value that can be set at the present time or that is elapsing will be shown in large digits on the display.  
To use the individual time-setting options, tap the button several times. The symbol that lights up corresponds to the value currently shown in large digits on the display.

### Types of heating and functions

 
Use the function selector to set the types of heating and other functions.

To make sure you always use the right type of heating to cook your food, we have explained the differences and applications below.

Type of heating	Use
	3D hot air For baking and roasting on one or more levels. The fan distributes the heat from the ring heating element in the back panel evenly around the cooking compartment.
	Gentle hot air For gently cooking selected types of food on one level without preheating. The fan distributes the heat from the ring-shaped heating element in the back panel around the cooking compartment. This heating function is used to measure both the energy consumption in air recirculation mode and the energy efficiency class.
	Grill, large area For grilling flat items, such as steaks or sausages, for making toast, and for browning food. The whole area below the grill element becomes hot.
	Circulated air grilling For roasting poultry, whole fish and larger pieces of meat. The grill element and the fan switch on and off alternately. The fan circulates the hot air around the food.

## 1.2 Ceramic Hob – Bosch 4 zone PKN811D17E

Below you can find information on how to use the hob. For more information you may need, please refer to the manufacturer's instruction manual.

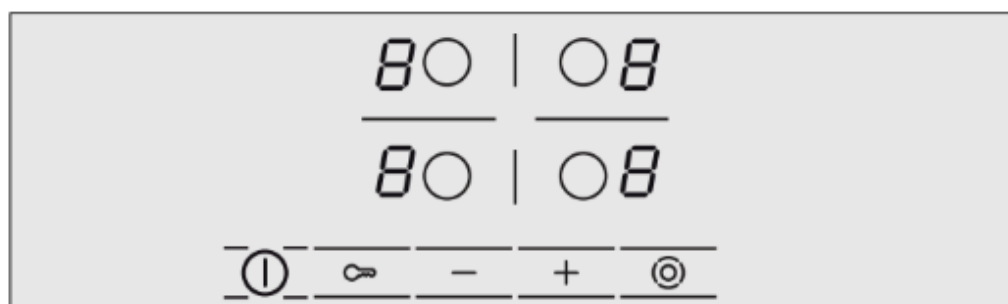

Indicators/symbols	
<b>i9</b>	Heat settings
<b>H/h</b>	Residual heat

Touch controls	
ⓘ	Main switch
🔑	Child safety lock
○	Hotplate selection
- +	Adjustment fields
⦿	Automatic zone control

### Notes

- When you touch a symbol, the respective function is activated.
- Always keep the controls dry. Moisture reduces their effectiveness.
- Do not pull pans close to the displays and sensors. The electronics could overheat.

### Notes

- Any dark areas in the glow pattern of the hotplate are due to technical reasons. The function of the hotplate is not affected.
- Hotplate temperature is regulated by the heat switching on and off. The heat may also switch on and off at the highest setting. This ensures e.g.:
  - sensitive components are protected from overheating
  - the appliance is protected from electrical overload
  - better cooking results are achieved
- With multi-circuit hotplates the heater elements of the inner filament circuits and the heater element of the activations may switch on and off at different times.

### Residual heat indicator

The hob has a two-stage residual heat indicator for each hotplate.

If **H** appears in the display the hob is still hot. It may be used, for example, to keep a small meal warm or to melt cooking chocolate. As the hotplate cools down further, the display changes to **h**. The display remains lit until the hotplate has cooled sufficiently.

## The hotplates

Hotplate	Activating and deactivating
○ Single-circuit hot-plate	
⦿ Dual-circuit hotplate	Select the hotplate and touch the ⦿ symbol
co Extended cooking zone	Select the hotplate and touch the ⦿ symbol

 
When the hotplate is activated, the corresponding display lights up  
Switching on the hotplate: the previously set size is automatically selected.

Due to the nature of the hob, please be advised that only ferromagnetic cookware can be used such as:

- Cookware made from enamelled steel
- Cookware made from cast iron
- Special induction-compatible cookware made from stainless steel

### 1.3 Microwave Bosch BFL523MSOB

Below you can find information on how to use the Microwave. For more information you may need, please refer to the manufacturer's instruction manual.

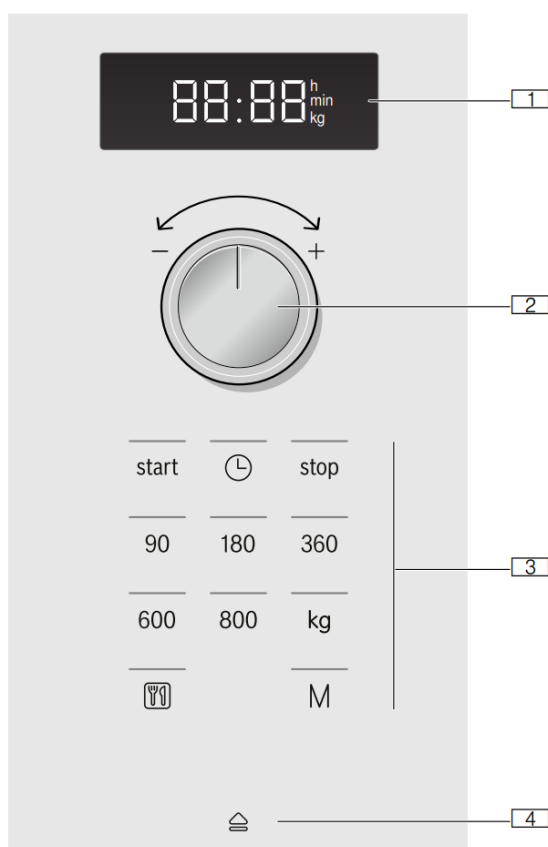

- 1 Display**  
For clock and cooking times
- 2 Rotary selector**  
For setting the clock and cooking times or for setting automatic programmes
- 3 Buttons**
- 4 Automatic door opening button**

#### Buttons and their meaning

You will find a brief explanation of the various buttons below.

Buttons	Meaning
<b>Symbol</b>	
start	Start the appliance
	Setting the time
stop	Stop or pause the appliance
90	Select a microwave power output of 90 watts
180	Select a microwave power output of 180 watts
360	Select a microwave power output of 360 watts
600	Select a microwave power output of 600 watts
800	Select a microwave power output of 800 watts
kg	Select a weight for the programmes
	Select automatic programmes
M	Select the memory
	Open appliance door

#### Rotary selector

The rotary selector is used to alter the default values and set values.

The rotary selector is retractable. Press on the rotary selector to lock it in or out.

#### Automatic door opening

The appliance door springs open if you activate the automatic door opening. You can fully open the appliance door manually.

The automatic door opening does not work in the event of a power cut. You can open the door manually.

#### Notes

- If you open the appliance door during operation, the operation is paused.
- When you close the appliance door, the operation does not continue automatically. You must restart the operation manually.
- If the appliance has been switched off for a long time, the appliance door will open after a time delay.

#### Cooling fan

The appliance is equipped with a cooling fan. The fan may run on even if the oven has been switched off.

#### Notes

- The cooking compartment remains cold during microwave operation. The cooling fan will still switch on. The fan may run on even when microwave operation has ended.
- Condensation may appear on the door window, interior walls and floor. This is normal and does not adversely affect microwave operation. Wipe away the condensation after cooking.

## 1.4 Freestanding Fridge Freezer – Bosch KGN33NL3AG

Below you can find information on how to use the fridge freezer.

For more information you may need, please refer to the manufacturer's instruction manual.

## Setting the temperature

### Refrigerator compartment

Turn temperature controller, Fig. 1/8, to the required setting.

We recommend the setting in line with the marking.

Changing the setting clockwise will lower temperatures in the refrigerator compartment.

At a room temperature below 16°C, slightly increase the temperature setting in the appliance. At a room temperature above 32°C, slightly reduce the temperature setting in the appliance.

Select a very cold setting only temporarily if:

- door is opened frequently,
- large quantities of food are placed in the refrigerator compartment.

### Freezer compartment

The temperature can be set from -18°C to -24°C.

Keep pressing temperature setting button 1 until the required freezer compartment temperature is set.

The last set value is saved. The set temperature is indicated on temperature display 3.

## Controls

Fig. 2

- 1 **Temperature selection button**  
The required temperature is set with this button.
- 2 **"super" display (freezer compartment)**  
Illuminates when super freezing is on.
- 3 **Temperature display freezer compartment**  
The numbers correspond to the set freezer compartment temperatures in °C.
- 4 **Eco mode indicator**  
This lights up when the eco mode is switched on.

## Switching on the appliance

Fig. 2

1. Insert the plug in the socket.
2. A warning signal sounds. The temperature display 3 flashes.
3. Press the temperature setting button 1. The warning signal switches off.

When the freezer compartment has reached the set temperature, the temperature display 3 is lit.

The factory recommends the following settings:

- Refrigerator compartment: medium setting
- Freezer compartment: -18°C

Store delicate foods in the refrigerator compartment.

 
## Operating tips

- When the appliance has been switched on, it may take several hours until the set temperatures have been reached.
- The fully automatic NoFrost system ensures that the freezer compartment remains free of ice. Defrosting is no longer required.
- The sides of the housing are sometimes heated slightly. This prevents condensation in the area of the door seal.
- If the freezer compartment door cannot be immediately re-opened after it has been closed, wait until the resulting low pressure has equalised.




## 1.5 Dishwasher – Bosch Slim line – SMV40C00GB

Below you can find information on how to use the dishwasher. For more information you may need, please refer to the manufacturer's instruction manual.

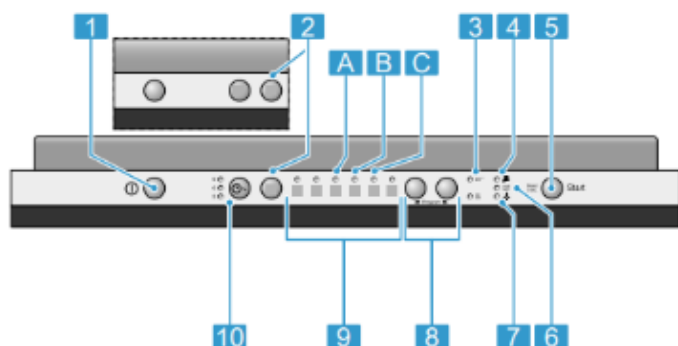

1	ON/OFF button ①	Switching on the appliance → Page 35 Switching off the appliance → Page 37
2	Additional functions <sup>1</sup>	Additional functions → Page 21
3	Programme sequence display	The programme sequence display shows the current cycle of the appliance, e.g. washing or drying.
4	Water supply display	Display for water supply lights up
5	Start button Start and reset button Reset 3 sec.	Starting the programme → Page 36 Terminating the programme → Page 37
6	Special salt refill indicator	Water softening system → Page 27
7	Rinse aid refill indicator	Rinse aid system → Page 30
8	Setting buttons	Setting a programme → Page 36 Changing basic settings
9	Programmes	Programmes → Page 19
10	Timer programming <sup>1</sup>	Setting timer programming → Page 36
 
<sup>1</sup> Depending on the appliance specifications

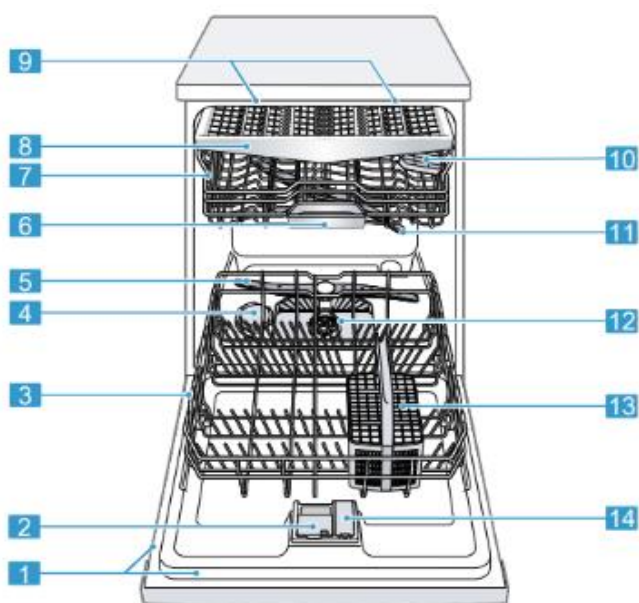

1	Rating plate	Rating plate with E number and FD number → Page 55.
2	Detergent dispenser	Detergent → Page 31 is added to the detergent dispenser.
3	Bottom basket	Bottom basket → Page 23
4	Dispenser for special salt	Add special salt for the Water softening system → Page 27 to the dispenser for special salt.
5	Lower spray arm	The lower spray arm washes the tableware in the bottom basket. If the tableware has not been washed properly, clean the spray arms. → "Cleaning spray arms", Page 41
6	Tablet collecting tray	During the wash cycle tablets automatically fall out of the detergent dispenser into the tablet collecting tray where they can fully dissolve.
7	Top basket	Top basket → Page 22
8	Cutlery drawer <sup>1</sup>	Cutlery drawer → Page 23
9	EmotionLight <sup>1</sup>	Interior lighting of the appliance. → "Overview of basic settings", Page 38
10	Etagere	Etagere → Page 24
11	Upper spray arm	The upper spray arm washes the tableware in the top basket. If the tableware has not been washed properly, clean the spray arms. → "Cleaning spray arms", Page 41
12	Filter system	Filter system → Page 40
13	Cutlery basket <sup>1</sup>	Cutlery basket → Page 23
14	Dispenser for rinse aid	Add rinse aid for the Rinse aid system → Page 30 to the dispenser for rinse aid.


<sup>1</sup> Depending on the appliance specifications



## 1.6 Auto Washer-Dryer – Bosch WKD28352GB

 Below you can find information on how to use the washer-dryer. For more information you may need, please refer to the manufacturer's instruction manual.

### Control panel

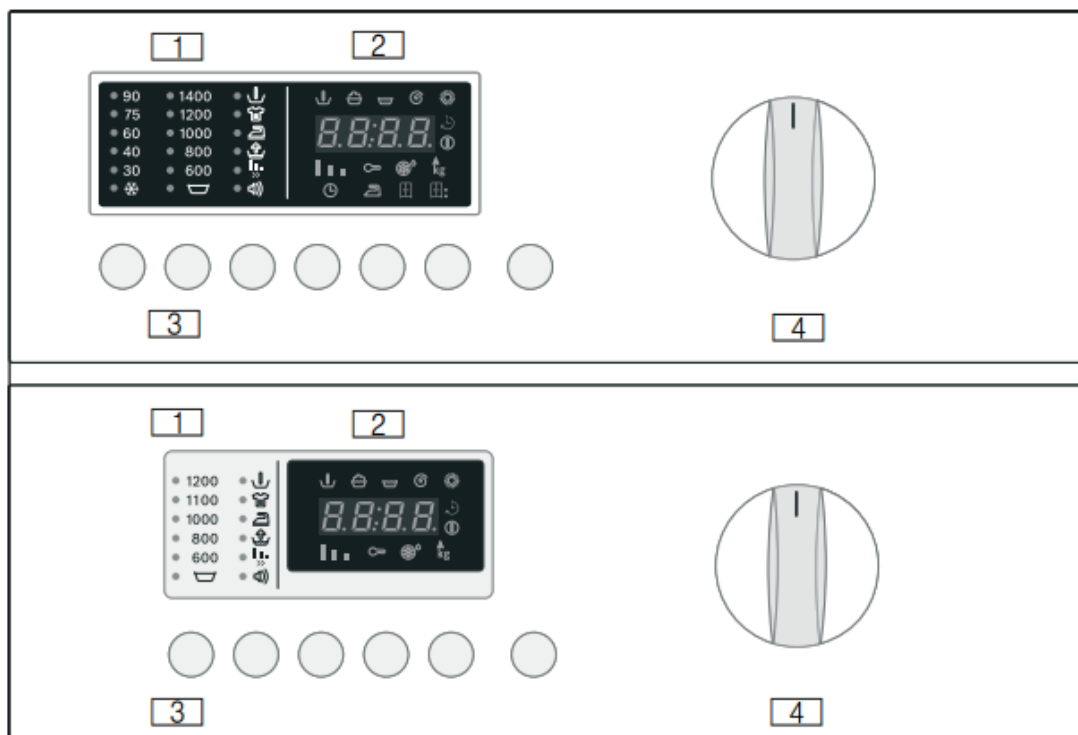

#### 1 Indicator lamp\*

Indicates the settings that have been selected for:

- Temperature ☼ 90°C
- Spin speed 1400 rpm.
- Options/signal

 

#### 2 Display Panel\*


Shows the settings that have been selected (e.g. spin speed, drying time), the progress of the current programme and the programme status.

- Programme progress:
  - ⏮ (Prewash)
  - ⏮ (Main Wash)
  - ⏮ (Rinse)
  - ⏮ (Final Spin)
  - (Drying) ☼
- Drying options:
  - ⌚ (Time-controlled drying)
  - ☼ (Iron-damp)
  - ☼ (Cupboard dry)
  - ☼\* (Extra-dry)
- Auxiliary displays:
  - ⌚ (programme start)(Finished in time)
  - ☼ (Childproof lock)
  - ☼\* (Fluff removal cycle)
  - kg (recommended load)

Continued.....

### **3 Buttons\***

 - Temperature  °C: individual adjustment of the washing temperature.
- Spin speed : individual adjustment of the spin speed.
- Options button: sets washing options.
- Set: activation/deactivation of the selected washing options.
- Finished In delays the Programme start.
- Drying  : sets the drying options

Start/Pause  starts and stops the washing programme.

### **4 Programme selector\***

For switching the washer-dryer on and off and for selecting the programme, can be turned in both directions. Do not adjust the programme selector while washing/drying is in progress.

\* Depending on the model.