# THE SPRINGS RESORT & GOLF CLUB

## USER GUIDE APPLIANCE INSTRUCTIONS

## Contents

Important Safety Information	3
Microwave MS22M8054AK	6
Fridge Freezer RB29FSRNDSA1EU	9
Dishwasher DW60M6040BB	12
Washing Machine WD804A046E	15
Oven NV70K1310BS	18
Hob C61R2AEE	21
Extractor Hood LAM2302	26

## Important Safety Information

#### Intended use

- For domestic use only.
- The appliance may be operated by children from 8 years of age, by persons who have limited physical, sensory or mental abilities and by persons who have inadequate experience or knowledge, provided they are supervised or have been instructed by a responsible person. Children must not perform any cleaning or maintenance work without supervision.
- Keep children below the age of 8 years old at a safe distance from the appliance and power cable.
- Keep pets away from the appliance.
- Report any damages or defects to the Park Office
- Washer dryers are suitable for machine washable textiles and hand washable wool and for drying certain types of textiles according to
  care instructions.
- Always follow the manufacturer's instructions when operating the appliances including when dosing all detergents, cleaning aids, cleaning products and cleaning agents.

#### Safety for children

#### Persons at risk are:

- Children;
- Persons whose powers of perception are physically or psychologically limited;
- Persons who do not have sufficient knowledge about how to use the appliance safely.

#### Action required:

- Make sure that children and other at-risk persons have understood the dangers.
- A person responsible for safety must supervise or instruct children and other at-risk persons when they are using the appliance.
- Do not allow children under 8 years old to use the appliance. Keep children below the age of 8 years old at a safe distance from the appliance and power cable at all times.
- If children play with the appliance they may get into life-threatening situations or injure themselves. Do not let children play with the appliance.
- If the appliance features a lock: keep the key out of the reach of children! Children may lock themselves in appliances, putting their lives at risk.

#### Warning - Risk of poisoning!

Detergents and care products may be poisonous if consumed. Keep detergents and care products out of the reach of children.

#### Warning - Eye / skin irritation!

Detergents and care products may cause irritation if they come into contact with the eyes or skin. Keep detergents and care products out of the
reach of children.

#### Warning - Risk of injury!

When you cook/wash/dry at high temperatures, the glass in appliance gets hot. Do not let children touch the hot door.

#### Washer / Dryer Door

• A safety device prevents the door from being opened during operation. Before opening, make sure that there is no water in the drum and that the drum is not moving.

#### Electrical safety

#### Warning - Danger of death if live parts are touched.

- When disconnecting the mains plug, always pull the plug itself and not the cable, otherwise the cable could be damaged.
- Never touch or hold the mains plug with wet hands.

#### ▲ Warning – Danger of death!

- Never cover or block ventilation openings.
- There is a risk of poisoning from flue gases that are drawn back in. Always ensure adequate fresh air in the room if the appliance is being operated in exhaust air mode at the same time as room air-dependent heat-producing appliance is being operated.

### ⚠ Warning – Risk of electric shock!

- A defective appliance may cause electric shock. Never switch on a defective appliance. Unplug the appliance from the mains or switch off the
  circuit breaker in the fuse box. Contact the Park Office.
- The appliances are high-voltage appliances. Never remove the casing.
- The cable insulation on electrical appliances may melt when touching hot parts of the appliance. Never bring electrical appliance cables into contact with hot parts of the appliance.
- Do not use any high-pressure cleaners or steam cleaners, which can result in an electric shock.
- Penetrating moisture may cause electric shock. Never subject the appliance to intense heat or humidity. Only use this appliance indoors.
- Never use electrical appliances inside the appliance (e.g. heaters, electric ice-makers).

#### General Safety

#### 

- If the appliance is lifted using projecting parts (e.g. the washer dryer door), these components may break off and cause injuries. Do not lift the appliance by its projecting parts.
- Do not climb onto the appliance, the worktop may break and cause injuries.
- Do not stand on or lean heavily against base of appliance, drawers or doors, etc or use the base, rails, doors, etc. as a step or support. The appliance
  may overturn and cause injuries.
- If you reach into the rotating drum of the washer / dryers, you may injure your hands. Do not grip the rotating drum. Wait until the drum stops rotating.
- Do not use pointed or sharp objects to remove layers of ice and frost in a freezer. You could damage the refrigerant pipes. If refrigerant shoots out, it may ignite or cause eye injuries.
- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- Porcelain or ceramic ovenware can have small perforations in the handles or lids. These perforations conceal a cavity below. Any moisture that penetrates this cavity could cause the ovenware to crack when used in the microwave. Only use microwave-safe ovenware.
- If using the microwave in microwave mode only, do not use cookware / containers made of metal or featuring metal detailing inside the appliance as this may cause sparks when the appliance is operating and may damage the appliance.
- Never allow hard objects to strike the turntable. The microwave glass turntable may splinter. Cracks or chinks in the glass turntable are dangerous.
   Handle the turntable with care.
- The hinges on the appliance door move when opening and closing the door, and you may be trapped. Keep your hands away from the hinges.
- Saucepans may suddenly jump due to liquid between the pan base and the hotplate. Always keep the hotplate and saucepan bases dry.
- The light emitted by LED lights is very dazzling, and can damage the eyes (risk group 1). Do not look directly into the switched on LED lights for longer than 100 seconds.

#### ↑ Warning - Risk of Scalding

- When washing at high temperatures you may be scalded if you touch the hot washing water (e.g. if draining hot washing water into a washing basin.)
- Do not contaminate plastic parts or door seals with oil or grease. Plastic parts and door seals will otherwise become porous.
- Never cover or block ventilation openings for the appliance.
- If a drying programme was interrupted, the washer dryers and the laundry may be very hot. Select Intensive Dry or low heat dry and allow 15 minute drying time to cool down the washing then remove.
- Do not store liquids in bottles or tins in the freezer compartment (in particular carbonated drinks). Bottles and tins may burst.
- High proof alcohol stored inside a fridge must always be tightly sealed and stored in an upright position.
- Never eat frozen foods immediately after they have been taken out of the freezer compartment. Risk of freezer burn.
- Avoid prolonged hand contact with frozen foods, ice, and the evaporator tubes, etc. Risk of freezer burn!

#### Marning − Risk of explosion!

- Liquids and other food may explode when in containers that have been tightly sealed. Never heat liquids or other food in containers that have been tightly sealed.
- Do not store products with flammable propellant gases (e.g. spray cans) or explosive substances inside the appliance.
- Do not add any solvents to the dishwashing chamber.

#### Warning – Risk of fire!

- Fatty deposits in the hood grease filter may catch fire. Never operate the cooker hood without a grease filter
- Grease deposits in the grease filter may catch fire. Never work with naked flames close to the appliance (e.g. flambéing).
- Hot oil and fat can ignite very quickly. Never leave hot fat or oil or fat unattended. Never use water to put out burning oil. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar.

- Cooking oil may catch fire if placed in the microwave. Never use the microwave to heat cooking oil on its own.
- When gas burners are in operation without any cookware placed on them, they can build up a lot of heat. A ventilation appliance installed above the cooker may become damaged or catch fire. Only operate the gas burners with cookware on them.
- Operating several gas burners at the same time gives rise to a great deal of heat. A ventilation appliance installed above the cooker may become damaged or catch fire. Never operate two gas burners simultaneously on the highest flame for longer than 15 minutes. One large burner of more than 5 kW is equivalent to the power of two gas burners.
- Combustible items stored in the cooking compartment may catch fire. Never store combustible items in the cooking compartment.
- Never open the appliance door if there is smoke inside. Switch off the appliance and unplug it from the mains or switch off the circuit breaker in the fuse box.
- The appliance may become very hot. If the appliance is installed in a fitted unit with a decorative door, heat will accumulate when the decorative door is closed. Only operate the appliance when the decorative door is open.
- Using the appliance for anything other than its intended purpose is dangerous and may cause damage. The following is not permitted when using the microwave: drying out food or clothing, heating slippers, grain or cereal pillows, sponges, damp cleaning cloths or similar. For example, heated slippers and grain or cereal pillows may catch fire, even several hours after they have been heated. The microwave must only be used for the preparation of food and drinks.
- Do not leave food heating unattended in containers made of plastic, paper or other combustible materials. Food may catch fire. Never heat food
  in heat-retaining packages.
- Do not select a microwave power or time setting that is higher than necessary.
- Never use the microwave to dry food. Never defrost or heat food with a low water content, e.g. bread, at a high microwave power or for too long.

#### Warning – Risk of burns!

- The accessible parts become very hot when in operation. Never touch hot parts. Keep children at a safe distance.
- There is a risk of overheating. Accessories and ovenware / microwave ware can become very hot. Always use oven gloves to remove accessories or ovenware from the cooking compartment.
- Alcoholic vapours may catch fire in the hot cooking compartment. Never prepare food containing large quantities of drinks with a high alcohol
  content. Only use small quantities of drinks with a high alcohol content. Open the appliance door with care.
- Foods with peel or skin may burst or explode during, or even after, heating.
- Heat is not distributed evenly through microwaved baby food. Never heat baby food in closed containers. Always remove the lid or teat. Stir or shake well after the food has been heated. Check the temperature of the food before it is given to the child.
- Airtight packaging may burst when food is heated. Always observe the instructions on the packaging. Always use oven gloves to remove dishes
  from the cooking compartment.

#### Warning – Risk of scalding!

- When you open the appliance door, hot steam or water may escape. Open the appliance door with care. Keep children at a safe distance.
- Water in a hot cooking compartment may create hot steam. Never pour water into the hot cooking compartment.
- There is a possibility of delayed boiling when a liquid is heated. This means that the liquid reaches boiling temperature without the usual steam bubbles rising to the surface. Even if the container only vibrates a little, the hot liquid may suddenly boil over and spatter. After heating, always place a spoon in the container. This will prevent delayed boiling.

#### Marning − Risk of serious damage to health!

- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food residue immediately. Always keep the cooking compartment, door seal, door and door stop clean.
- Microwave energy may escape if the cooking compartment door or the door seal is damaged. Never use the appliance if the cooking compartment door or the door seal is damaged. Contact the after-sales service.

#### **IMPORTANT NOTE**


In the following pages you will find basic operating and cleaning instructions for the appliance in the home.

Please ensure you are familiar with these instructions prior to using the appliances.

For more detailed information on how to operate the appliances, please refer to the manufacturers operating instructions or contact the Park Office.

## Microwave MS22M8054AK

#### Oven

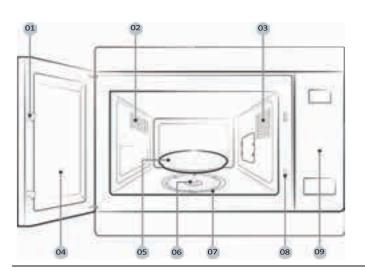

- 01 Door latches 04 Door
- 02 Ventilation holes
- 05 Turntable
- 07 Roller ring 08 Safety interlock holes
- 03 Light
- 06 Coupler
- 09 Control panel

#### Control panel



- 1. Quick Defrost
- 2. Auto Cook
- Keep Warm
- Kitchen Timer
- Microwave
- Deodorization 6.
- Favourite 7.
- Child Lock 8.
- 9. Down
- 10. Up
- 11. Select
- 12. Clock
- 13. STOP/ECO
- 14. START/+30s

#### Cooking/Reheating



- 1) Open the door. Place the food in the centre of the turntable. Close the door. Press the Microwave button.
  - Never switch the microwave oven on when it is empty.

The 850 W (Maximum cooking power) indications are displayed:

- 2) Select the appropriate power level by pressing the Up or Down button and then press the Select button.
- 3) Set the cooking time by pressing the Up or Down button. The cooking time is displayed.
- 4) Press the START/+30s button.

The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished:

- The oven beeps 4 times.
- The end reminder signal will beep 3 times (once every minute).
- The current time is displayed again.

#### Microwave

#### **Quick start**



- 1. Place the food in the oven and then select the cooking time by Up and Down button. The cooking time is displayed.
- 2. Press the START/+30s button. Microwave mode (850 W) starts. When it has finished:
  - 1) The oven beeps 4 times.
  - 2) The end reminder signal will beep 3 times (once every minute).
  - 3) The current time is displayed again.

#### Adjusting the cooking time

You can increase the cooking time by pressing the START/+30s button once for each 30 seconds to be added. In Microwave mode, pressing START/+30s button increases cooking time.

- Check how cooking is progressing at any time simply by opening the door
- · Increase the remaining cooking time



#### Method 1

To increase the cooking time of your food during cooking, press the START/+30s button once for each 30 seconds that you wish to add.

• Example: To add three minutes, press the START/+30s button six times.

#### Method 2

Just pressing the Up or Down button to adjust cooking time.

#### Stopping the cooking

You can stop cooking at any time so that you can:

- Check the food.
- Turn the food over or stir it.
- Leave it to stand.

To stop the cooking	Then	
Temporarily	<ul> <li>Open the door or press the STOP/ECO button once. Cooking stops.</li> <li>To resume cooking, close the door again and press the START/+30s button.</li> </ul>	
Completely	<ul> <li>Press the STOP/ECO button once. Cooking stops.</li> <li>If you wish to cancel the cooking settings, press the STOP/ECO button again.</li> </ul>	

#### **Microwave**

#### Using the quick defrost features

The Quick Defrost features enable you to defrost meat, poultry, fish, frozen vegetable and frozen bread. The defrost time and power level are set automatically. You simply select the programme and the weight.

#### NOTE

Use only containers that are microwave-safe.

Open the door. Place the frozen food on a ceramic in the centre of the turntable. Close the door.







- 1. Press the Quick Defrost button.
- 2. Select the type of food that you are cooking by pressing the Up or Down button and then press the Select button.
- 3. Select the size of the serving by pressing the Up or Down button.
  - Press the START/+30s button.
  - Defrosting begins.
  - The oven beeps through defrosting to remind you to turn the food over.
- 4. Press the START/+30s button again to finish defrosting
  - The oven beeps 4 times.
  - The end reminder signal will beep 3 times (once every minute).
  - · The current time is displayed again.

#### Using the child lock features

Your microwave oven is fitted with a special child lock programme, which enables the oven to be "locked" so that children or anyone unfamiliar with it cannot operate it accidentally.



- 1. Press the Child Lock button for 3 seconds.
  - The oven is locked (no functions can be selected).
  - The display shows
- 2. To unlock the oven, press the Child Lock button for 3 seconds. The oven can be used normally.

## Fridge Freezer RB29FSRNDSA1EU

## Operating Your Refrigerator



#### 1 Freezer

Press the Freezer button to set the freezer to desired temperature from range between -15 °C and -23 °C. Default set temperature is set on -19 °C and each time you press the Freeze button, temperature will be changed in the following order and temperature indicator will display the desired temperature.

Press this button for 3 seconds to activate the Power Freeze function.

Power Freeze indicator (\*\*) will light up and the refrigerator will speed up the time to needed to freeze products in the freezer.

This function will be activated for 50 hours and freezer indicator will not change display. This function switches off automatically.

When the Power Freeze process is completed, the Power freeze indicator switches off and the freezer switches back to the previous temperature setting.

When you use this function, the energy consumption will increase. Remember to turn it off when you do not need it and return the freezer to your original temperature setting. To deactivate this function, press the Freezer button for 3 seconds.

If you need to freeze large amount of food stuff, activate Power Freeze function 20 hours before.

#### 2 Fridge

Press the Fridge button to set the fridge to desired temperature between 1 °C and 7 °C. The default set temperature is 3 °C and each time to you press the Fridge button, the temperature will be changed in the following order and temperature indicator will display the desired temperature.

#### 3 Coolselect Zone

Press Coolselect Zone button to activate the Coolselect Zone function. Coolselect Zone indicator ( will light up and then you can store meat and fish. Press Coolselect Zone button again, the Coolselect Zone indicator ( ) light will turn off and then you can store vegetables.



- Some of the feature such as Water tank and Coolselect Zone (1) can be different and may not be available depending on the model.
  - The fruits or the vegetables could get frozen in Cool Select Zone and Fresh Zone. (Optional)
  - To freeze large quantities of food quickly, use the very bottom drawer (2) where food freezes particularly quickly.

#### **Temperature Alarm**

When the freezer compartment is too warm because there has been a power failure, the temperature LED will blink and the alarm will sound. Press Freezer or Fridge button to stop them.

This warning may occur:

- When the refrigerator is turned on.
- The freezer compartment is too warm due to a power failure.

## Fridge Freezer

#### **Using The Control Panel**










- Each time you press a button on the control panel, you will hear a short beep.
- When you do not press any button, the LEDs of Freezer, Fridge and Coolselect Zone become turned off for the minimum energy consumption but LEDs of Power Freeze and Vacation are turned on at the corresponding functions.
- Depending on the model, the LED indicators of the freezer may not turn on when you open the freezer door.

#### **Features of The Freezer Compartment**

#### Frozen-Food Mark On The Door Panel

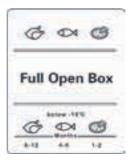

The symbols indicate the permitted storage period of the produce in months. When purchasing frozen produce, observe the use or sell-by date.

#### Freezing food

Freeze fresh, undamaged food only. Keep food which is to be frozen away from food which is already frozen. To prevent food from losing its flavour or drying out, place in airtight containers.

Packing food correctly:

- 1. Place the food in the packaging.
- 2. Press out all the air.
- 3. Seal the wrapping.
- 4. Label the wrapping with the contents and date.

#### Thawing frozen food

Depending on the type and application, select one of the following options:


- At room temperature.
- In the refrigerator.
- In an electric oven, with/without fan assisted hot-air.
- In a microwave oven.

Do not store the frozen products longer than the max storage period.


## Fridge Freezer

#### **Using The Water Dispenser**

- With the water dispenser, you can obtain chilled water easily without opening the refrigerator door.
- Lift up the Can Carry (1).
- Lift up and pull out the water tank (2).

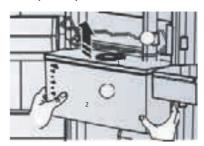

- Hold the handgrips on both sides to lift out the water tank.
- Clean the inside of water tank before using it for the first time.
- Fill the water tank with water, ensuring that it is in a stable position, allowing water supply outlet.
- Fill with water up to 4.5 L. If is filled higher than this, it may overflow when the lid is closed. - If water dripping occurs after first filling the water tank, pour of some water (approximately 500 ml.)
- Fill the water lifting the round lid in the arrow direction to open of lifting the large lid to open.

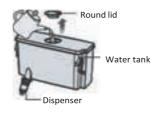 



#### **A** CAUTION


When assembling the water tank after cleaning, make sure the Dispenser is well sealed otherwise it may cause a water leak.

- Close the refrigerator door after fitting the water tank.
- Confirm that the dispenser is outside after closing the door.



#### **⚠** CAUTION

- Fix water tank to the fridge door tightly. If not, water tank may not operate correctly.
- Do not use the refrigerator without the water tank. If not, it may cause an efficiency problem.
- Do not fill anything other than water as mineral water or purified water in the water tank.
- Place a glass underneath the water outlet and push gently against the dispenser lever with your glass. Make sure the glass is in line with the dispenser to prevent the water from bouncing out.
- Check that the locking device is set to "UNLOCK". Water can only be dispensed on this setting.

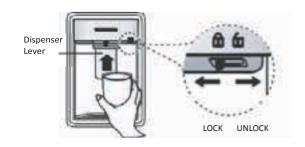


## Dishwasher DW60M6040BB

#### **Control Panels**

(PC	MER AUT				
(	1	2 34567891011			
1	Power	Press this button to turn on your dishwasher: the screen lights up.			
2	Cycle	To select washing program press this button.			
3	Upper	When you select <b>Upper</b> , only the upper rack nozzle is activated. The lower nozzle will not			
		operate. Use this feature to wash a small load of dishes or glasses placed in the upper rack.			
		When you select <b>Upper</b> , place dishes, glasses, etc. in the upper rack only. The dishwasher			
		will not wash items placed in the lower rack.			
4	Lower	Selecting <b>Upper</b> reduces both the cycle time and the amount of electricity consumed.			
4	Lower	When you select <b>Lower</b> , only the lower rack nozzle is activated. The upper nozzle will not operate. Use this feature to wash a small load of dishes or glasses placed in the lower rack.			
		When you select <b>Lower</b> , place items, glasses, etc. in the lower rack only. The dishwasher will not wash items placed in the upper rack.			
		Selecting <b>Lower</b> reduces both the cycle time and the amount of electricity consumed.			
5	Hygiene	Push the <b>Hygiene</b> button for the best possible hygiene in your dishwasher. At the final rinse it			
		heat up to 67 °C and hold this temperature for a several minutes. This function is available			
6	Multi tab	with all program except Quick Wash and Pre Wash.			
0	Willi Lab	To select <b>Multi tab</b> option which needs salt and rinse aid but a <b>Multi tab</b> tablet. This option can be used with all program except Auto, Quick Wash and Pre Wash.			
7	Control lock	This option allows you to lock the buttons on the control panel so children cannot accidentally			
		start the dishwasher by pressing the buttons on the panel. To lock and unlock the buttons on			
		the control panel, hold down both the <b>Control lock</b> buttons for three (3) seconds.			
		If Rinse Refill or Salt Refill indicator is lit, it means rinse aid or salt needs to be refill.			
		(b) Delay start Indicator  If the "Delay start" indicator is lit, it means, you have selected the "Delay start" entire			
		<ul> <li>If the "Delay start" indicator is lit, it means, you have selected the "Delay start" option.</li> <li>Rinse Refill Indicator</li> </ul>			
8	Indicator	If the "Rinse Refill" indicator is lit, it means the dishwasher is low on dishwasher rinse			
		aid and requires a refill.			
		Salt Refill Indicator			
		• If the "Salt Refill" indicator is lit, it means the dishwasher is low on dishwasher salt and			
9	Dicplay	needs to be refilled.			
10	Display Delay start	Display the remaining time, error code, or delay time.  Press this button to set the delayed hours for washing. You can delay the start of washing up			
		to <b>24</b> hours. One press on this button delays the start of washing by one hours.			
11	Start	To start a cycle, press the Start button before closing the door.			
		*Reset : To cancel a currently running cycle and drain the dishwasher, press and hold the			
		Start button for three (3) seconds. Once the dishwasher is reset, select a cycle and option,			
		and then press Start to restart the dishwasher.			

#### Dishwasher

- - You can select options (Multi tab, Half load, Delay, Hygiene) before starting a cycle.
- To prevent the touchpad from losing response sensitivity, follow these instructions:
  - Touch the centre of each keypad using one finger. Do not push.
  - Clean the touch control's surface regularly with a soft, damp cloth.
  - Be careful not to touch more than one touch keypad at a time, except as directed.

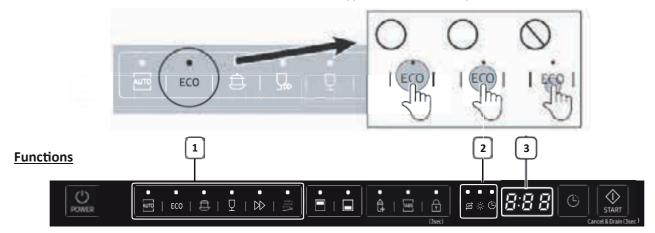

1 Program icons	Press the <b>Program</b> button to select each program.		
<b>Intensive</b>	Heavily soiled items include pots and pans		
Auto wash	Lightly to heavily soiled daily using items, automatic detection of the amount of soiling		
ECO <b>ECO</b>	Normally soiled daily used items, with reduced energy and water consumptions.		
<b>Express</b>	Normal daily used items, with short cycle time.		
□ Delicate	Lightly soiled delicate items.		
Prewash	Cold water rinse for removing dirt before running another program.		
2 Refill indicators	ndicators If Rinse Aid or Salt Refill indicator is lit, it means rinse aid or salt is needed to refill.		
3 Display	Display the remaining time, error code, or delay time.		
Rinse refill indicator	Rinse refill indicator If Rinse Aid or Salt Refill indicator is lit, it means rinse aid or salt needs to be refilled.		
Salt refill indicator	If the "Salt Refill" indicator is lit, the dishwasher is low on dishwasher salt and needs to be refilled.		

#### **Using Detergent**

All dishwasher cycles require detergent in the detergent compartment. Add the correct amount of detergent for the selected cycle to ensure the best performance.


CAUTION: Use dishwasher detergent only. Regular detergent produces too much foam, which may decrease the dishwasher's performance or cause it to malfunction. Part of the second seco

#### Filling the detergent dispenser

- 1. Open the detergent dispenser flap by pushing the detergent dispenser release catch.
- The flap is always open at the end of a dishwashing cycle.

#### Dishwasher

- 2. Add the recommended amount of detergent to the main wash detergent compartment.
- 3. Close the flap by sliding it to the left and then pressing it down.
- There is no separate button that is specific to using tablet detergents.
- 4. For better cleaning result, especially if you have very dirt items, add small amount (about 8 g) of detergent on the door. That will act in prewash phase.

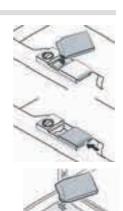

#### **Change The Programme**

A cycle that is underway can only be modified if it has only been running for a short time. Otherwise, the detergent may have already been released, and the appliance may have already drained the wash water. If this is the case, the detergent dispenser must be refilled.

Press the Power button or Reset button 3 seconds to cancel the programme, and turn on it again, then you can change the programme to the desired cycle setting.



If you open the door during a wash cycle, the machine will pause. The program light will stop blinking and the buzzer will beep every minute unless you close the door. After you close the door, the machine will keep on working after 3 seconds automatically.

#### Adding dishes

A forgotten dish can be added at any time before the detergent dispenser opens.

- 1. Open the door a little to stop the washing.
- 2. Once the spray arms stop working, you can open the door completely.
- 3. Add forgotten dishes and close the door, the dishwasher will resume after ten seconds.



MARNING: It is dangerous to open the door when washing, because the hot water may scald you. If the door is opened while the dishwasher is running, a safety mechanism is activated and stops the cycle.

#### Cleaning

#### **Cleaning The Door**

- To clean the edge around the door, you should use only a soft warm, damp cloth.
- Never use abrasive cleaners or scouring pads on the outer surfaces because they will scratch the finish. Some papers towels can also scratch or leave marks on the surface.




MARNING: Never use a spray cleaner to clean the door panel for it could damage the door lock and electrical components. It is not advised to use the abrasive agent or paper towel because of the risk of scratching or leaving spots on the stainless steel surface.

#### Caring For The Dishwasher

- To clean the control panel use a lightly damp cloth then dry thoroughly.
- To clean the exterior use a good appliance polish wax.
- Never use sharp objects, scouring pads or harsh cleaners on any part of the dishwasher.

## Washing Machine wd804A046E

## **Control panel**

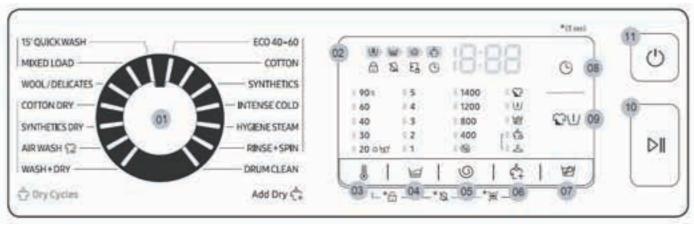


<b>01</b> Cycle Selector	Turn the dial to select a cycle.	
<b>02</b> Display	The display shows current cycle information and estimated time remaining, or an information code when a problem occurs.	
<b>03</b> Temp.	Press to change the water temperature for the selected cycle.	
<b>04</b> Rinse	Press to change the rinse count for the current cycle. You can set the rinse count to a max of 5, depending on the cycle.	
<b>05</b> Spin (①	<ul> <li>Press to change the spinning speed for the current cycle.</li> <li>Rinse Hold (No indicator): The final rinse cycle is suspended so that the laundry remains in the water. To unload the laundry, run a drain or spin cycle.</li> <li>No Spin : The drum does not spin after the final drain cycle.</li> <li>Spin Only : To run the Spin Only cycle, press Spin for 3 seconds. When the cycle time and spinning speed appear, press Spin repeatedly until a desired spinning speed is selected. Then, press Start/Pause to start the cycle. The spinning time depends on the selected cycle.</li> </ul>	
<b>06</b> Dry Option $\stackrel{c}{\leftarrow}$	Press this button to select proper drying option.	
<b>07</b> Bubble Soak	Press to activate/deactivate the Bubble Soak function. This function helps remove a wide variety of stubborn stains.	
08 Delay End 🕒	Delay End lets you set the end time of the current cycle. Based on your settings, the start time of the cycle will be determined by the machine's internal logic. For example, this setting is useful for programming your machine to finish a wash at the time you normally return home from work.  • Press to choose a pre-set unit of hours.	
09 Options ௐШ	Press to select the options. Availability of the options depends on the cycle.	
10 Start/Pause	Press to start or stop operation.	
11 Power	Press to turn on/off the washing machine.	

<sup>\*(3</sup> sec): Press and hold for 3 seconds.


## **Washing Machine**

#### **Simple Steps to Start**

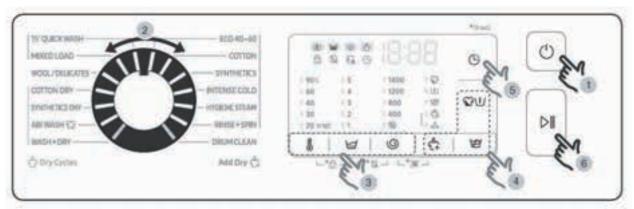

- 1. Press () power to turn on the washing machine.
- 2. Turn the Cycle Selector to select a cycle.
- 3. Change the cycle settings ( § Temp., MRinse and Spin) as necessary.
- 4. Press 😭 U Options, 🗹 Bubble Soak or 🖧 Dry Option to chose desired options. Available options differ depending on the selected cycle.
- 5. To delay the washing cycle by a period of time, press 🖰 Delay End (see Delay End section overleaf).
- 6. Press ⊳∥ Start/Pause.

#### **Drying Only**

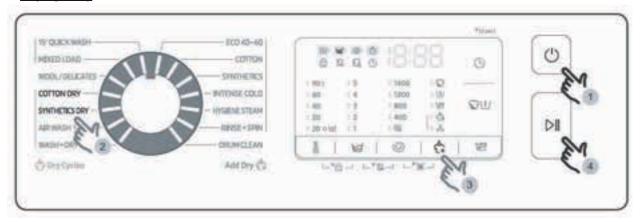

You can dry your clothes directly or dry the washed clothes according to the following procedures.

- 1. Press () power button to turn on the washing machine.
- 2. Turn the Cycle Selector to select the appropriate drying cycle.
- 3. Press 🛱 Dry Option button to select the appropriate drying mode.
- 4. Press ▷ Start/Pause button to start dry.

#### To change the cycle during operation

- 1. Press Start/Pause to stop operation.
- 2. Select a different cycle.
- 3. Press Start/Pause again to start the new cycle.

## **Washing Machine**

#### **Delay End** (-)

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 1 to 24 hours (in 1 hour increments). The hour displayed indicates the time the wash will finish.

- 1. Select a cycle. Then change the cycle settings if necessary.
- 2. Press Delay End repeatedly until a desired end time is set.
- 3. Press Start/Pause. The corresponding indicator turns on with the clock running.
- 4. To cancel the Delay End, restart the washing machine by pressing the Power button.

## Child Lock

To prevent children or infants from accidentally starting or setting the washing machine, Child Lock locks all buttons except for the Power button.

To set the Child Lock function, hold down 

▼ Temp. and 


Rinse simultaneously for 3 seconds. To activate, press Start/ Pause. 

□

To release the Child Lock function, hold down Temp. and Mark Rinse simultaneously for 3 seconds.

#### **Detergent drawer guidelines**

The washing machine provides a three-compartment dispenser: the left compartment for the main wash, the centre compartment for fabric softeners, and the right compartment for the preliminary wash.

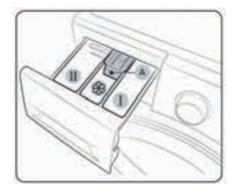


- Prewash compartment: Apply prewash detergent.
- Main-wash compartment: Apply main-wash detergent, water softener, soaking detergent, bleach, and/or stain removers.
- Softener compartment: Apply additives such as fabric softener. Do not exceed the max line (A).

#### **A** CAUTION


- Do not open the detergent drawer while the washing machine is operating.
- Do not use the following types of detergent:
  - Tablet or capsule types
  - Ball or net types
- To prevent the compartment clogging, concentrated or highly-enriched agents (fabric softener or detergent) must be diluted with water before being applied.
- When Delay End is selected, do not apply detergent directly into the drum. Otherwise, this may discolour the laundry. Use the detergent drawer when Delay End is selected.
- Do not use any cleaning agents for cleaning the drum. Chemical residue in the drum deteriorates the washing performance.

## Oven NV70K1310BS

#### **Control Panel**

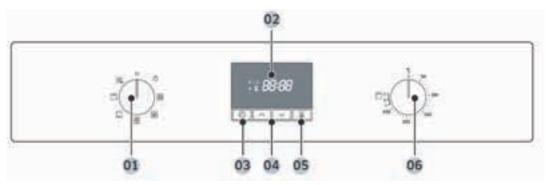

<b>01</b> Mode selector	Turn to select a cooking mode or function.	
<b>02</b> Display	Shows time information or a brief description of the selected mode.	
03 Cooking Time/ Clock	Press to set the cooking time. Press and hold for 3 seconds to set the current time.	
<b>04</b> Up / Down	Use to adjust the setting value for clock or timer settings.	
<b>05</b> Timer	Timer helps you check the time or operating duration while cooking.	
<b>06</b> Value dial	Use the value dial to set the temperature or power level for grilling.	

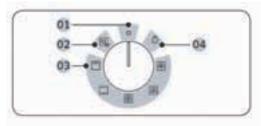


#### **Mode selector**

**01** Off

**02** Fast preheat

**03** Cooking modes

 **04** Oven light

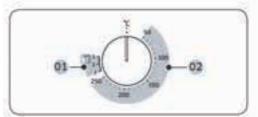

#### Value dial

 
**01** Power level for grilling

02 Temperature range



#### **Cooking modes**


It is recommended to insert food in the oven after preheating is complete to ensure best results.

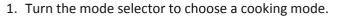

2. Turn the temperature dial to set a desired temperature within the temperature range. For Grill mode, select a power level instead.



**02** Cooking modes except for Grill

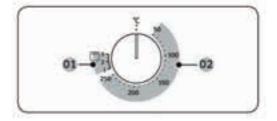

#### Oven

#### **Set Cooking time**



- 1. Press
- 2. Use the \( \sum \) buttons to set the cooking time, and then press \( \sum \). You can set the time to a max of 23 hours and 59 minutes.
- NOTE
  Preheating is not necessary for Grill mode.
- NOTE

  If you want to clear the cooking time, press , and then set the time to 0:00.

	Mode	Suggested temperature (°C)	Instructions
4	Convection	170	The rear heating element generates heat, which is evenly distributed by the convection fan. Use this mode for baking and roasting on different levels at the same time.
	Conventional	200	The heat is generated from the top and bottom heating elements.  This function should be used for standard baking and roasting for most types of dishes.
(A)	Top heat + convection	190	The top heating element generates heat, which is evenly distributed by the convection fan. Use this mode for roasting that requires a crispy top (for example, meat or lasagne).
<u> </u>	Bottom heat + convection	190	The bottom heating element generates heat, which is evenly distributed by the convection fan. Use this mode for pizza, bread, or cake.
<u></u>	Large grill	Level 2	The large-area grill emits heat. Use this mode for browning the tops of food (for example, meat, lasagne, or gratin).

#### **Child lock**



To prevent accidents, Child lock disables all controls. Child lock is available only in Off or Oven light mode.

Hold down the and buttons simultaneously for 3 seconds to activate, or hold down for 3 seconds again to deactivate the lock on the control panel.

NOTE

When Child lock is activated, "L" appears on the display.

#### Oven

#### Cleaning

- Make sure the oven and accessories are cool before cleaning.
- Do not use abrasive cleaning agents, hard brushes, scouring pads or cloths, steel wool, knives or any other abrasive materials.

#### Oven interior

- For cleaning the interior of the oven, use a clean cloth and a mild cleaning agent or warm soapy water.
- Do not hand-clean the door seal.
- To avoid damaging the enamelled oven surfaces, only use standard oven cleaners.
- To remove stubborn soils, use a special oven cleaner.

#### Oven exterior

- For cleaning the exterior of the oven such as the oven door, handle, and display, use a clean cloth and a mild cleaning detergent or warm soapy water, and dry with a kitchen roll or dry towel.
- Grease and dirt can remain, especially around the handle because of the hot air coming from inside. It is recommended to clean the handle after each use.

#### Accessories


• Wash the accessories after every use, and dry it with a tea towel. To remove stubborn impurities, soak the used accessories in warm soapy water for about 30 minutes before washing.

#### Catalytic enamel surface (applicable models only)

- The removable parts are coated with dark grey catalytic enamel. They can be soiled with oil and fat spattered by
  the circulating air during convection heating. However, these impurities burn off at oven temperatures of 200 °C
  or above.
  - 1. Remove all accessories from the oven.
  - 2. Clean the interior of the oven.
  - **3.** Select Convection mode with max temperature, and run the cycle for an hour.

## Hob C61R2AEE

#### **Control Panel**

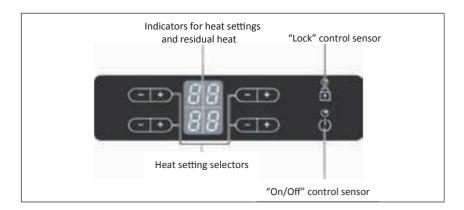

Digital displays: The four display fields are assigned to the four cooking zones.

They show the following information:

- - the appliance has been switched on,
- II to II selected heat settings,
- 📳 residual heat,
- I the child lock is activated; and
- 🖫 🖪 error message, the sensor has been touched for longer than 10 seconds.
- 🖩 📔 error message, when the Hob is overheated because of abnormal operation.

#### Safety Shutoff

If one of the cooking zones is not switched off or the heat setting is not adjusted after an extended period of time, that particular cooking zone will automatically switch itself off.

Any residual warmth will be indicated with  $\blacksquare$  (for "hot") in the digital displays corresponding to the particular cooking zones. The cooking zones switch themselves off at the following times.

Cooking setting	1 - 2	After 6 hours
Cooking setting	3 - 4	After 5 hours
Cooking setting	5 - 6	After 3 hours
Cooking setting	7 - 9	After 1 hour

#### Residual heat indicator

You can use the residual heat for thawing or keeping food warm.

⚠ Important: As long as the residual heat indicator is illuminated, there is a risk of burns.

Important: If the power supply is interrupted, the symbol will go out and information about residual heat will no longer be available. However, it may still be possible to burn yourself. This can be avoided by always taking care when near the hob.

#### Switching the appliance on

Touch the "Lock ⊕" sensor for approximately 3 seconds.

The appliance is switched on using the "On / Off ()" control sensor.

Touch the "On / Off  $\bigcirc$ " sensor. The digital displays will show  $\blacksquare$ .

After the "On / Off " sensor has been pressed to switch on your appliance, a heat setting must be selected within approximately 10 seconds. Otherwise, the appliance will switch itself off for safety reasons.



#### **Temperature control**

For setting and adjusting the power level ( for cooking, touch the corresponding cooking zone's and keys.

The first time  $lue{}$  is pressed, the heat level is set to  $lue{}$ 

The first time 🖭 is pressed, the heat level is set to 🖥

Use the key to increase the heat setting and the key to decrease.



#### Switching the appliance off

To completely switch off the appliance, use the "On / Off " control sensor. Touch the "On / Off " sensor.

After switching off a single cooking zone or the entire cooking surface, the presence of residual heat will be indicated in the digital displays of the corresponding cooking zones in the form of an  $\mathbb{H}$  (for "hot").




if the heat setting is set at and you want to turn the burner off, the sensor can be touched one additional time, and the heat setting will go to zero.

For faster adjustment, keep your finger on the 🕒 or 🖃 sensor until the required value is obtained.

If more than one sensor is pressed for longer than 10 seconds, **[]** will show in the heat setting display. To reset, touch the "On / Off "o" sensor.

#### Switching a cooking zone off

To switch off a cooking zone, return the setting to by using the control panel's heat setting and touch sensors or +.

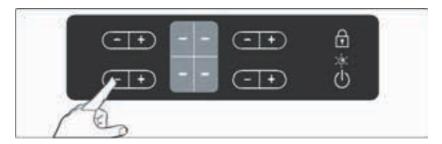


#### Using the child safety lock

You can use the child safety lock to safeguard against unintentionally turning on a cooking zone and activating the cooking surface . The lock control sensor can be used only when the power is on.

#### Switching the child safety lock on

1 . Touch the  $\widehat{\Box}$  control sensor for approximately 3 seconds. An acoustic signal will sound as confirmation.

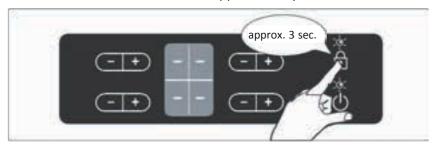


2 . Touch any heat setting control sensor. 📗 will appear in the displays, indicating the child safety lock has been activated.



#### Switching the child safety lock off

1. Touch the control sensor for approximately 3 seconds. An acoustic signal will sound as confirmation.

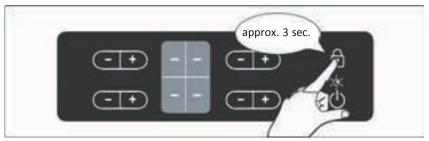

After switching off the appliance, child safety lock will be activated automatically within some minutes for safety reasons.

#### Cleaning

- Important: Cleaning agents must not come into contact with a heated ceramic glass surface: All cleaning agents must be removed with adequate amounts of clean water after cleaning because they can have a caustic effect when the surface becomes hot. Do not use any aggressive cleaners such as grill or oven sprays, scouring pads or abrasive pan cleaners.
- Clean the ceramic glass surface after each use when it is still warm to the touch. This will prevent spillage from becoming burnt onto the surface. Remove scales, watermarks, fat drippings and metallic discolouration with the use of a commercially available ceramic glass or stainless steel cleaner.

#### **Light Soiling**

 
- 1. Wipe the ceramic glass surface with a damp cloth.
- 2. Rub dry with a clean cloth. Remnants of cleaning agent must not be left on the surface.
- 3 . Thoroughly clean the entire ceramic glass cooking surface once a week with a commercially available ceramic glass or stainless steel cleaner.
- 4. Wipe the ceramic glass surface using adequate amounts of clean water and rub dry with a clean lint-free cloth.

#### Stubborn Soiling

- 1. To remove food that has boiled over and stubborn splashes, use a glass hob scraper.
- 2. Place the glass scraper at an angle to the ceramic glass surface.
- 3. Remove soiling by scraping with the blade.

#### **Problem Soiling**

- 1 . Remove burnt-on sugar, melted plastic, aluminium foil or other materials with a glass scraper immediately and while still hot.
- 2. Clean the hob as normal when it has cooled down.

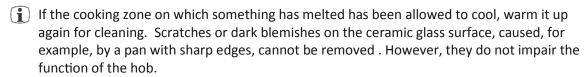



**Important**: There is a risk of burning yourself when the glass scraper is used on a hot cooking zone.

- **Important:** Do not use vinegar, lemon juice or scale remover on the hob frame; otherwise dull blemishes will appear.
- 1. Wipe the frame with a damp cloth.
- 2. Moisten dried debris with a wet cloth. Wipe and rub dry.


#### To avoid damaging the appliance

- Do not use the cooktop as a work surface or for storage.
- Do not operate a cooking zone if there is no pan on the cooktop or if the pan is empty.
- Ceramic glass is very tough and resistant to temperature shock, but it is not unbreakable. It can be damaged by a particularly sharp or hard object dropping onto the cooktop.
- Do not use pans made of cast iron or which have damaged bases with rough edges or burrs. Scratching may occur if these pans are slid across the surface.
- Do not place pans on the hob frame. Scratching and damage to the finish may occur.
- Avoid spilling acidic liquids, for example, vinegar, lemon juice and descaling agents, onto the hob frame, since such liquids can cause dull spots.
- If sugar or a preparation containing sugar comes into contact with a hot cooking zone and melts, it should be cleaned off immediately with a kitchen scraper while it is still hot. If allowed to cool, it may damage the surface when removed.
- Keep all items and materials that could melt, for example, plastics, aluminium foil and oven foils, away from
  the ceramic glass surface. If something of this nature melts onto the cooktop, it must be removed
  immediately with a scraper.

## **Extractor Hood LAM2302**

#### **Control Panel Layout**

- 1. Light
  - (0) Light Off
  - (I) Light On
- 2. Extraction
  - (0) Off
  - (I) Low speed
  - (II) Medium Speed
  - (III) High Speed

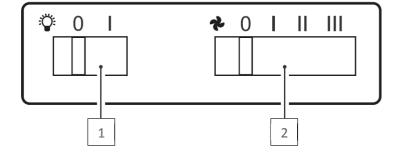

#### **Using the Extractor**

Ideally you should turn on your hood 10 minutes before you start to cook, or at the very least when you begin cooking. You should also run your hood for 10 minutes after you have cooking.

Use with Induction Hobs - Large quantities of vapour and steam can be produced very quickly. This steam may condense onto the cold metallic surfaces of the extractor and even the splash back area if tiled, glazed etc. This is not a fault with either the hob or extractor if correctly installed.

Using lids on pans can help reduce the amount of steam being released and subsequent condensation. Induction hobs offer a powerful, more efficient heating process but do not generate the higher levels of ambient heat that would normally help dissipate vapour and steam as with older hob technology.

#### Cleaning

Wipe the external surfaces of the appliance regularly using warm water and a mild detergent.

Never use a non-abrasive cleaner. Any abrasive cleaner (including Cif) will scratch the surface.

t: 01933 354000 e: sales@phplh.com www.prestigehomeseeker.com