

# THE SPRINGS

RESORT & GOLF CLUB


## Heating and Air Conditioning Controls Operating Instructions

The controller will usually have a blank display. Touching the screen will bring up the Status Display below, this indicates the current set temperature. Touching the display again brings up the Main Display.

### Temperature Adjustment

The Heating and Air Conditioning System is a very high efficiency system, and has been set to operate in Automatic Mode. This means that the system will automatically select Heating or Cooling as required, and because of this you have two temperature setpoints to adjust to change the temperature in the room.

The higher temperature is the temperature that Cooling will begin to operate as the temperature rises in the room, the lower temperature is the temperature that Heating will begin to operate as the room temperature falls. Both temperatures need to be 2°C apart to maintain the system efficiency and so both should be changed when changing the temperature in the room.

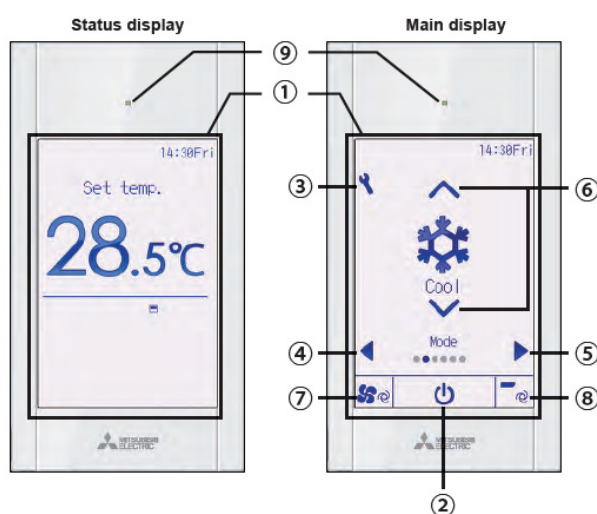

#### ① Touch Panel & Backlit LCD Display

When the backlight is off, pressing any area switches the screen to the Status display.

While the Status display is displayed, pressing any area switches the screen to the Main display.

#### ② ON/OFF Button

The Heating and Cooling Unit is usually on, running at a low temperature. Press the ON/OFF button to turn the Heating and Cooling Unit off, press again to turn the unit back on.

#### ③ Maintenance Setting Button

For Engineer Use only. The button is locked.

#### ④ ◀ Left Button

Press to display the setting items in the following order:

- Fan Speed (Locked to AUTO)
- Operation mode (Locked to AUTO)
- Setpoint Temperature (Use to adjust the Temperature in the Room)

#### ⑤ ▶ Right Button

Press to display the setting items in the following order:

- Setpoint Temperature (Use to adjust the Temperature in the Room)
- Operation mode (Locked to AUTO)
- Fan Speed (Locked to AUTO)

#### ⑥ ▲ ▼ Buttons

Press to change the contents of the setting selected in ④ and ⑤ above.

#### ⑦ Fan Speed Shortcut Button

Press to directly access the fan speed settings screen.

Note: The Fan Speed is locked to Auto meaning that the fan will vary automatically according to the temperature requirements within the room.

#### ⑧ Vane ShortcutButton

This area is blank as the option is not available.

#### ⑨ ON/OFF Lamp

This lamp is not normally illuminated. If the light flashes there is a fault with the system.